

VOICE

	Voice Name	Voice Type	Voice Number		
			MSB#	LSB#	Pr#(1)
1	BasicDanceHook	Regular	104	26	91
2	ThreeSawMono	Regular	104	37	82
3	Phat Lines	Regular	104	27	91
4	RawSquareStack	Regular	104	0	87
5	Dance Fat Poly	Regular	104	28	91
6	Punchy Saw	Regular	104	38	82
7	Magic Chords	Regular	104	29	91
8	TrancyPolyhook	Regular	104	30	91
9	Square Fifth	Regular	104	1	87
10	Simple Tech	Regular	104	13	85
11	Fat Saw Hook	Regular	104	31	91
12	Monster Hook	Regular	104	32	91
13	BasicPolysynth	Regular	104	33	91
14	SweepingSwell	Regular	104	9	96
15	PitchWarpSweep	Regular	104	10	96
16	Falling Sweep	Regular	104	11	96
17	Fat Trance Pad	Regular	104	11	51
18	Uni Six Pad	Regular	104	12	51
19	Fat Saw Pad	Regular	104	13	51
20	Monster Pad	Regular	104	12	52
21	DX100 Bass	Regular	104	16	40
22	DanceBassDark	Regular	104	17	40
23	Deep Rezz Bass	Regular	104	18	40
24	Raw Bass	Regular	104	19	40
25	CoolSquareBass	Regular	104	20	40
26	Sub Velo Click	Regular	104	21	40
27	Sub Saw Bass	Regular	104	22	40
28	Brite Punch SQ	Regular	104	30	89
29	JP Short Seq	Regular	104	31	89
30	Ultra Short SQ	Regular	104	32	89
31	Dyno Decay SQ	Regular	104	33	89
32	Fix Start SQ	Regular	104	34	89
33	Growl Saw	Regular	104	39	82
34	Growl Square	Regular	104	13	81
35	Wobbling	Regular	104	13	102
36	WhiteNoiseFall	Regular	104	2	123
37	DancePowerCmp	Regular	104	34	91
38	Square Vibrato	Regular	104	14	81
39	Phat Stack SQ	Regular	104	35	89
40	Simple Saw SQ	Regular	104	36	89
41	Growl SQ Bass	Regular	104	30	88
42	Velo Wave Bazz	Regular	104	31	88
43	Magic Yai	Regular	104	32	88
44	Destruct Baz	Regular	104	33	88
45	DubStep 8VeloD	Regular	104	34	88
46	DubStep 8VeloB	Regular	104	35	88
47	Dub Step Menu	Regular	104	36	88
48	Destruct FX	Regular	104	0	119
49	DancePowerKit	Live!Drums	127	0	93
50	Dub Step Kit	Live!Drums	127	0	94

STYLE

Style Name	Style Type
01 Cherie Dance	Pro
02 Euphoric	Pro
03 Gangnam	Pro
04 Girls Dance	Pro
05 Go Dance	Pro
06 Level Dance	Pro
07 Love It Party	Pro
08 Mafia House	Pro
09 Wolf Dance	Pro
10 World Dance	Pro
11 DubStep I	Pro
12 DubStep II	Pro
13 ElectroHouse	Pro
14 ElectroB&B	Pro
15 WhyNotHouse	Pro
16 Chill' Step	Pro
17 Dark Spin	Pro
18 Italo Dance	Pro
19 Tajo Beat	Pro
20 Hit Trance	Pro
21 Jagg'R'Move	Pro
22 Sax'O'Bit	Pro
23 Black'P'Beat	Pro
24 DiscoReggae	Pro
25 WalkingBoots	Pro
26 Spacy HipHop	Pro
27 GermanHipHp	Pro
28 Beon Dance	Pro
29 Summer Grv	Pro
30 Regueton	Pro
31 Reggaetone	Pro
32 Dyskoteka	Pro
33 Latino Dance	Pro
34 Rumba Dance	Pro
35 Dance Field	Pro
36 Poker Beat	Pro
37 Disco Ska	Pro
38 Dollar Beat	Pro
39 sAfri Dance	Pro
40 Neutrino	Pro
41 Atzen Party	Pro
42 TikTak Disco	Pro
43 Arp Pop	Pro
44 Apres Ski	Pro
45 Euro Mix	Pro
46 Turkish Mix	Pro
47 TurkishParty	Pro
48 TurkishTechno	Pro
49 Euro Dance	Pro
50 Balkan Dance	Pro
51 KeyGoHouse	Pro
52 ElecSoulDance	Pro
53 ElecHouseBallad	Pro
54 SwedishHouse	Pro
55 DeepHouseDJ	Pro
56 PowerPop2015	Pro
57 ElecHouse2015	Pro
58 DJHitHouse	Pro
59 90sNightRhythm	Pro
60 SummerHouse	Pro
61 HolidayHouse	Pro
62 Dancehall2015	Pro

MULTIPAD

Multi Pad Name
ArpDown
ArpUp&Down
ArpUpA
ArpUpB
ChordSeq
CombiArpA
CombiArpB
CombiArpC
GatePad
MelodicArp
PumpingPad
StepSeq

REGIST

Regist Name	
Euro Dance 01	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 01n	1 Euro Dance 2016
	2 Euro Dance 2016
	3 Euro Dance 2016
	4 Euro Dance 2016
	5 Euro Dance 2016
	6 Euro Dance 2016
	7 Euro Dance 2016
	8 Euro Dance 2016
Euro Dance 02	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 02n	1 Euro Dance 2016
	2 Euro Dance 2016
	3 Euro Dance 2016
	4 Euro Dance 2016
	5 Euro Dance 2016
	6 Euro Dance 2016
	7 Euro Dance 2016
	8 Euro Dance 2016
Euro Dance 03	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 03n	1 Euro Dance 2016
	2 Euro Dance 2016
	3 Euro Dance 2016
	4 Euro Dance 2016
	5 Euro Dance 2016
	6 Euro Dance 2016
	7 Euro Dance 2016
	8 Euro Dance 2016
Euro Dance 04	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 05	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance

Regist Name	
Euro Dance 06	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 07	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 08	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 09	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 10	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 11	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 12	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance
Euro Dance 13	1 Euro Dance
	2 Euro Dance
	3 Euro Dance
	4 Euro Dance
	5 Euro Dance
	6 Euro Dance
	7 Euro Dance
	8 Euro Dance

DEMO(.mid)

Demo Name
EuroDanceDemo